



FIREFIGHTER

IN A
BOX

Getting Started (Fire Master Inspection Software)

FireFighter In a Box Asset Inspection includes sample data in order to illustrate the application's processes. However, this data must be imported manually. Instructions on how to import this data is outlined below.

Hydrant Inspection

1. Power up your new MC75.
2. Go to Start Menu – Located at the upper left hand corner of the display
3. Scroll down and select (TAP) **PTS TracerPlus 6**
4. **Import** sample data by selecting File -> Import Data from the Menu at the Lower Left.
5. Tap the **Hydrant Inspection** icon to open the entry form and begin data entry
6. Select the **Route** by tapping the **dropdown arrow** and selecting **WC-04**.
7. Select the **Hydrant ID** by tapping the **dropdown arrow** and **PALM1**.
8. **Additional data is filled in automatically based on sample data.**
9. Tap **Next** (located at the lower right part of the screen)
10. Perform inspection by tapping relevant checkboxes, then enter water flow information.
11. **Measured Flow** will be automatically calculated based on entered information.
12. Tap **Next** (located in the lower right part of the screen)
13. Take Photos of any abnormalities and enter any relevant comments in the **Comment** field.
14. Enter the Inspecting Fire Fighter **Name** and **Unit**. **Date** is automatically recorded.
15. Tap **Save Record** (located in the lower right part of the screen)
16. The printer will **PRINT** a label with Hydrant Number

Building Inspection

1. Power up your new MC75.
2. Go to Start Menu – Located at the upper left hand corner of the display
3. Scroll down and select (TAP) **PTS TracerPlus 6**
4. **Import** sample data by selecting File -> Import Data from the Menu at the Lower Left.
5. Tap on the **Building Insp.** Tab to switch form Hydrant to Building Inspection.
6. Tap the **Building Inspection** icon to open the entry form and begin data entry
7. Select the **Business** by tapping the **dropdown arrow** and selecting **Building 1**.
8. **Additional data is filled in automatically based on sample data.**
9. Tap **Start Inspection** (located at the lower right part of the screen)
10. Tap on **Fire Protection Systems**, then follow program prompts to perform data entry

11. When finished, tap, **Main**, then tap **Enter Violations** to record violations.
12. Tap **Back** to select the next Area of Inspection. (Egress, then Electrical and Storage)
13. Perform additional Inspections, repeating violation entries as needed.
14. When inspection is complete, tap **Acknowledge** then relevant comments.
15. Record proof of inspection via signatures.
16. Tap the **Re-inspection Date** field to record a date for follow-up inspection.
17. Tap **Save Inspection**.

Additional Resources for:

Starting the application

Setting up Data Transfer Methods

Connecting to your Mobile Printer

Visit: http://us.bluestarinc.com/motorola/fire_master_bundle